


# How to Unlock/Lock the FWS-Poly

## / Unlock

### 1. Remove the Screws


The figure below shows the location of the TWO screws.

Unscrew and remove the two cover screws shown below with the provided allen wrench.

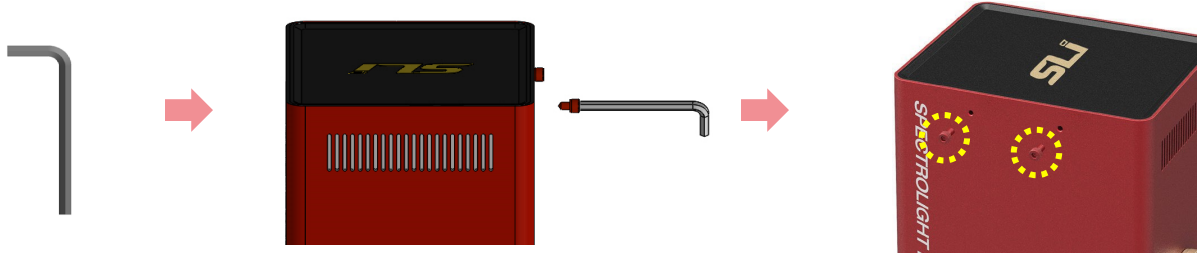

*The screws are used to protect against dust and other foreign substances.*

### 2. Use the T-Wrench

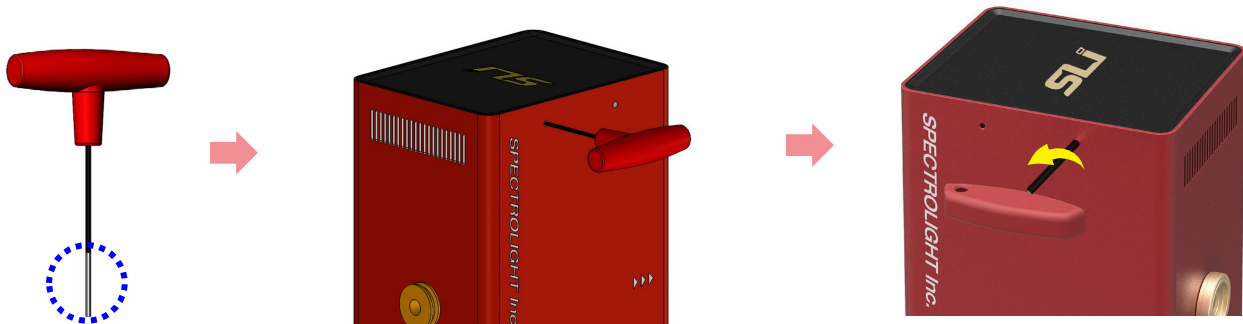

Insert the T-Wrench into a hole until the **SILVER SECTION** of the wrench **IS INSERTED ALL THE WAY** inside the hole. Afterwards, turn the wrench **COUNTER CLOCKWISE** (to the left) around a few times as shown in the above figure. Repeat this step for the other screw hole.

**Note: Must unlock both holes with the provided T-Wrench.**

## / Lock

### Repeat the Unlock Steps

Go over all the steps of Unlock process.

However, for the “Use the T-Wrench” step, turn the wrench **CLOCKWISE** (to the right) to apply the motor rotation brakes. Repeat this step for the other screw hole.

**Note: Must lock both holes with the provided T-Wrench.**



*When shipping or transporting the device, it is a **MUST** to lock the device by applying the motor rotation brakes.*

*There is a high chance causing a critical damage to the inside components during shipping if the motor rotation brakes are **NOT** applied.*